

1. Player Mode Changing. Push this button, USB/SD/BLT sourcing changeable.
2. Volume-/Backward: Push this button and release, play the last file; Push the button and hold it, decrease the playing volume.
3. Volume+/Forward: Push this button and release, play the next file; Push the button and hold it, increase the playing volume.
4. Repeat Button: Repeat the playing song.
5. Play/Pause Button.

TECHNICAL SPECIFICATIONS

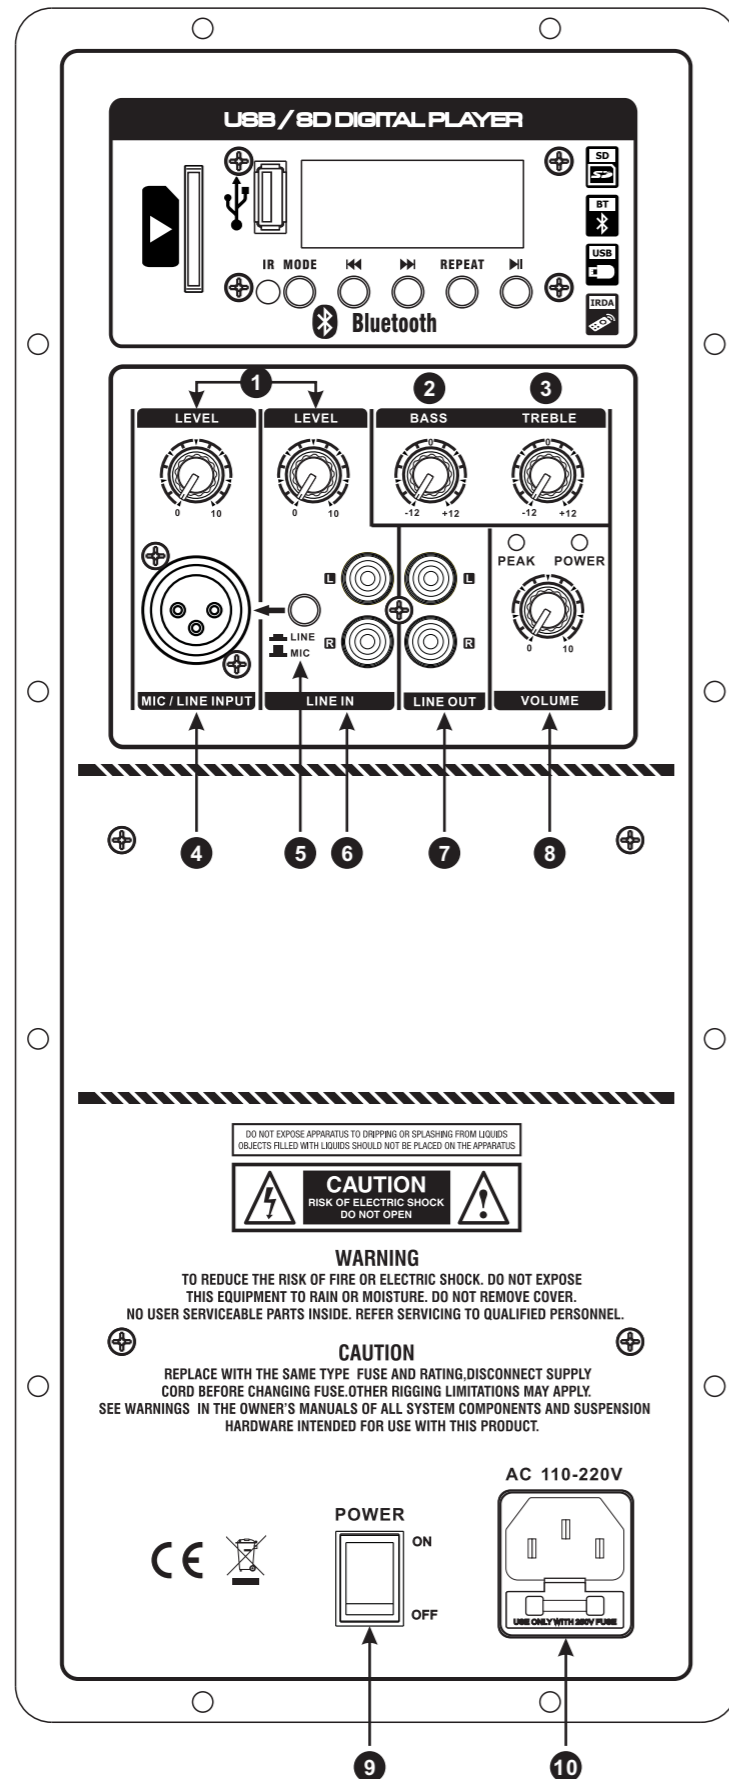
Configuration:	15" 2-WAY
Frequency Range (-10dB):	40Hz-20KHz
Power Capacity:	300W
Nominal Impedance:	4 ohms
Sensitivity (1W@1m):	98dB(±2dB)
Crossover Frequency:	3KHz
Maximum SPL:	118 dB
Input Connectors:	XLR&RCA
Dimensions (HxWxD):	755x515x475 mm
Net Weight:	22 kg

PROFESSIONAL POWERED SPEAKER 15"

Part number:PRA-150

USER'S MANUAL

Please read this manual carefully and proper take care of this manual

**1. LEVEL**

The knobs adjust the volume of the each input channel.

2. BASS

The knob adjusts low frequency volume of the amplifier.

3. TREBLE

The knob adjusts high frequency volume of the amplifier.

4. MIC / LINE INPUT

Mic input accepts XLR-type connectors and is designed to suit a wide range of balanced or unbalanced signals. We recommend to use professional balanced dynamic, condenser or ribbon Mics as they are the least likely to be interfered. Low-cost, high impedance Mics can also be used but not recommended, as the level of background noise will be higher since unbalanced circuit is far more susceptible to pickup interference.

5. MIC / LINE BUTTON

This button is used to switch the microphone input and line input.

6. LINE IN INPUT

Line input accepts 1/4 TRS plug with balanced or unbalanced line. It accepts all kinds of signals from sources such as keyboards, electronic drums, tape recorder, etc. Except microphone signals, which when you use unbalanced 1/4 TRS plug, the line input automatically turns the ring into ground, thus using unbalanced 1/4 TRS plug with this mixer is not recommended.

7. LINE OUT

Line output accepts 1/4 TRS plug line. Output stereo signals to relevant music playing sets.

8. VOLUME

The knob adjust the master volume of the amplifier.

9. Power Switch

This switch turns on / off the unit.

10. Universal AC input connector

Connect the power cord to the AC input connector before turning on the power switch.